



Boxspring montage

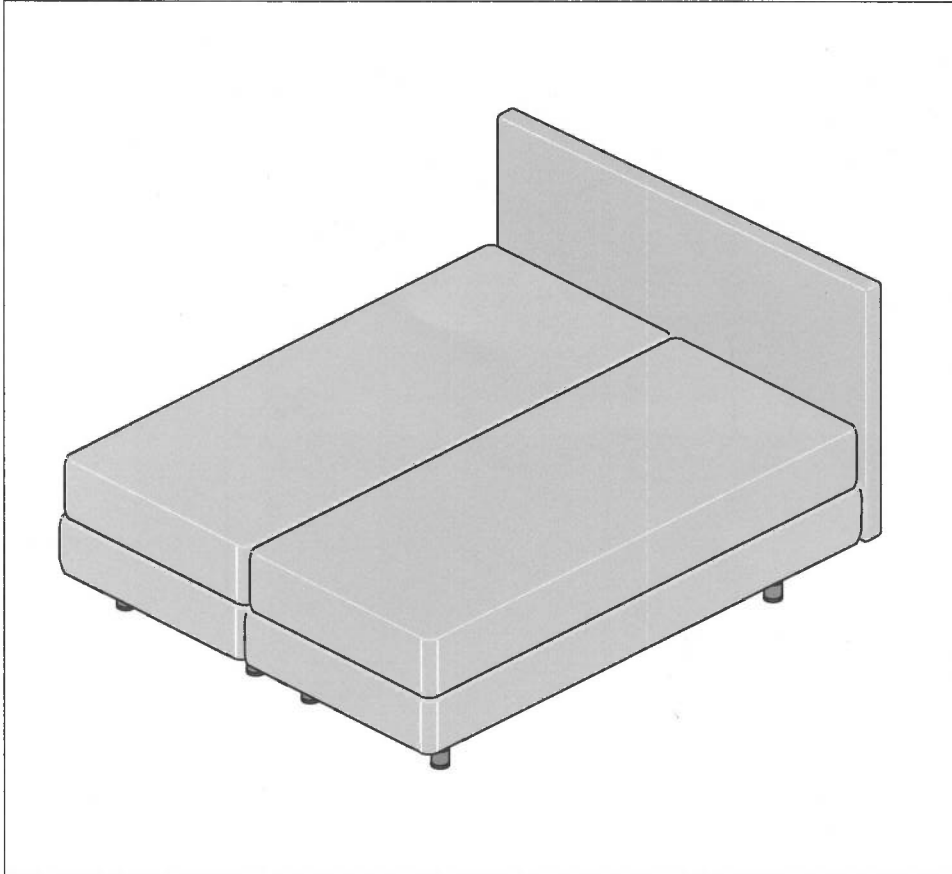

auping


160/180/200 cm

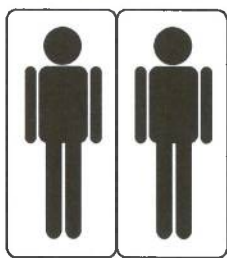

120/140 cm



80/90/100 cm





1M



2M



3M

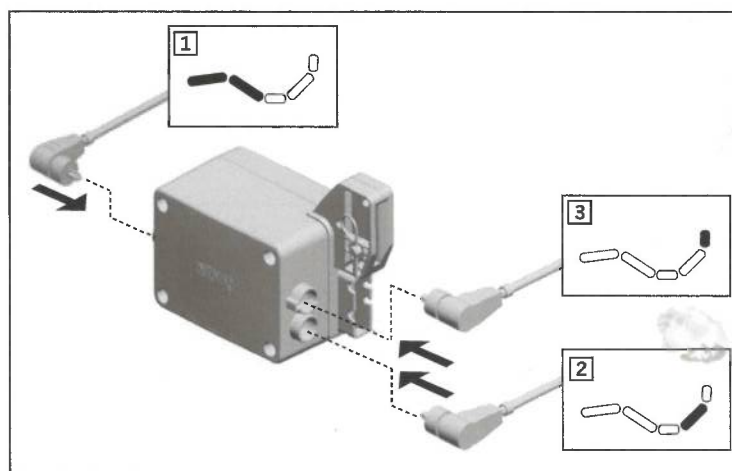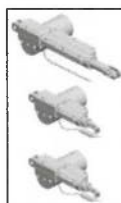



3138940 1x/2x



3137600 1x/2x





1027720 1x/2x

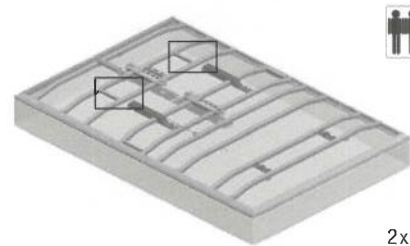



3138940




3137600 - 1027720

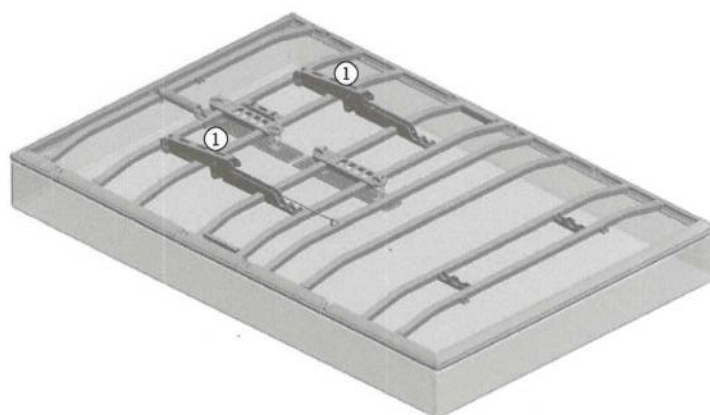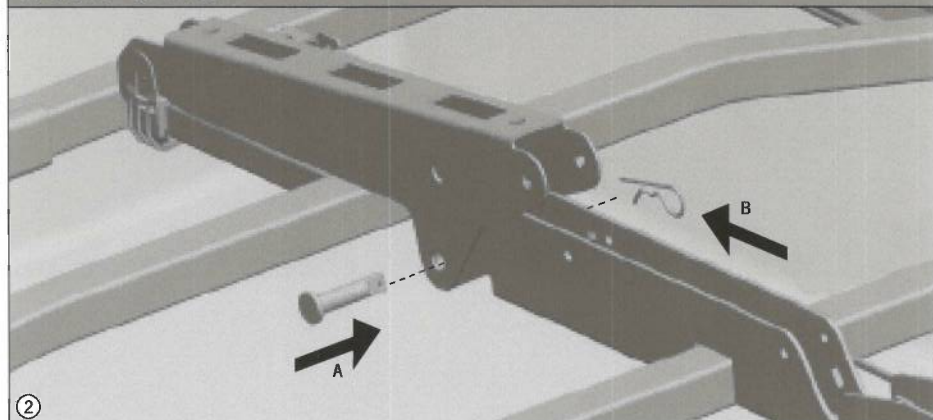


499898 2x

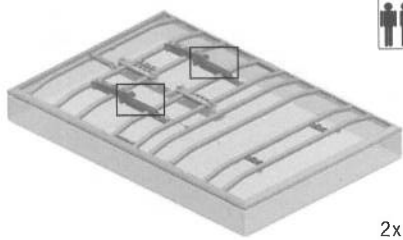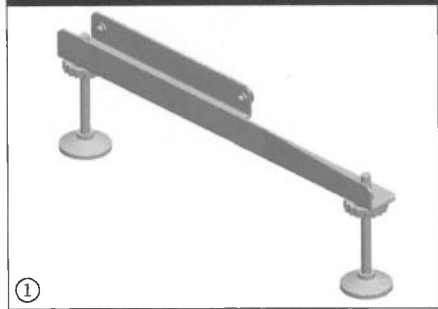



499898








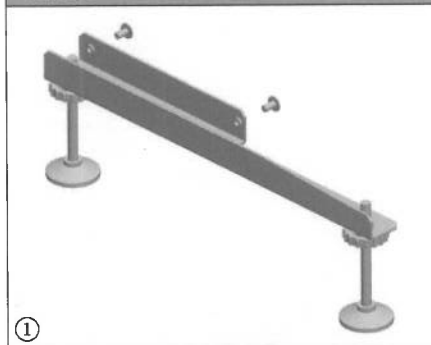


499898

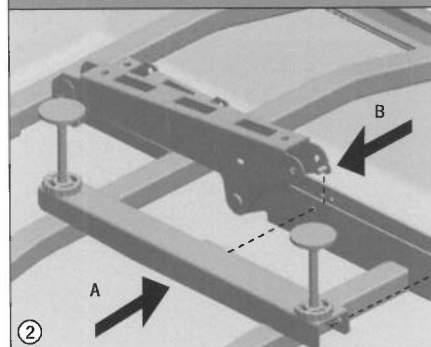

2x

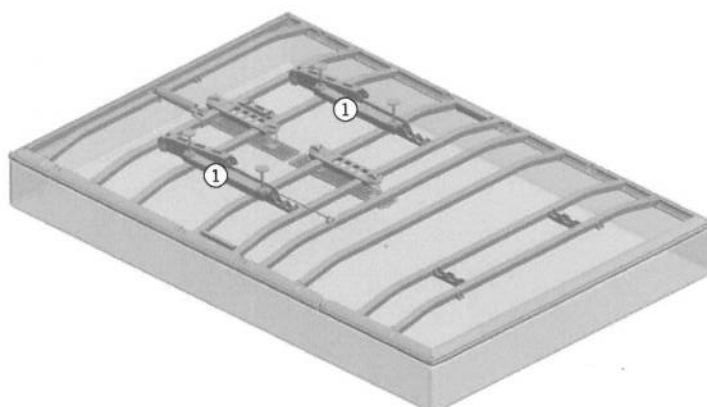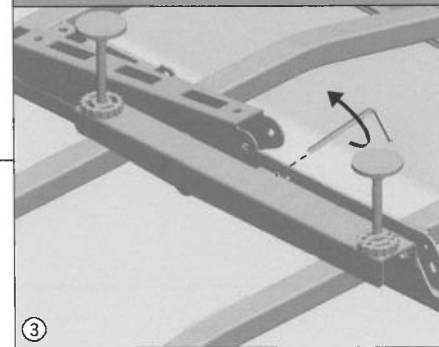

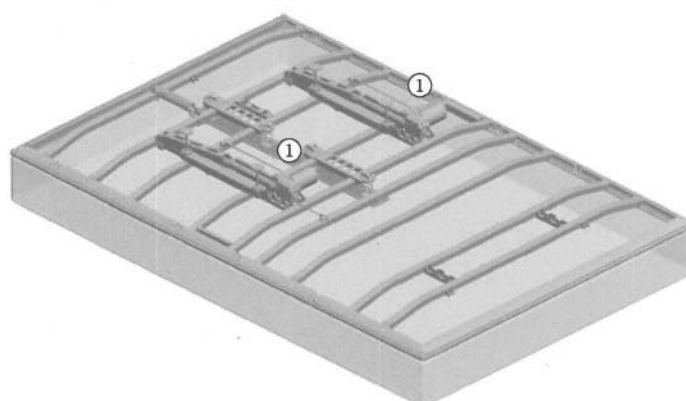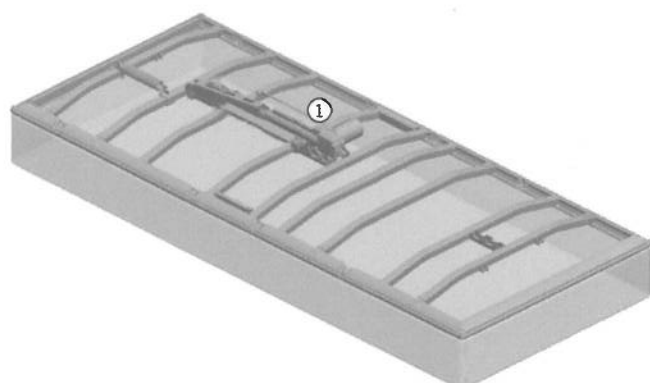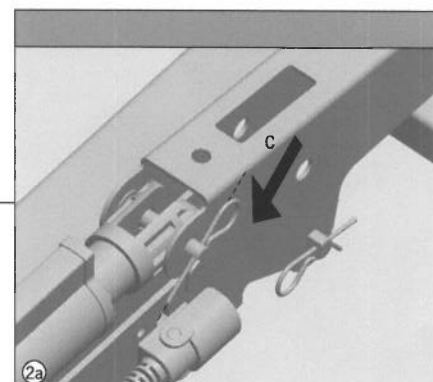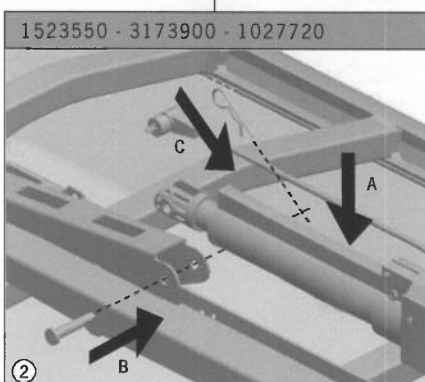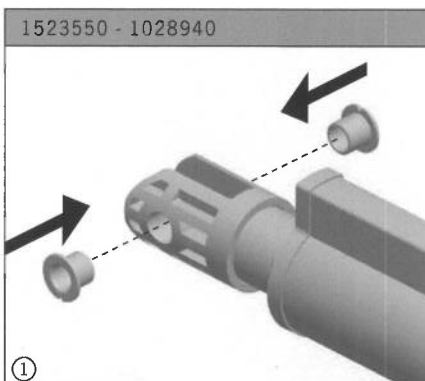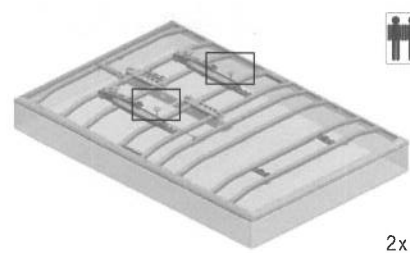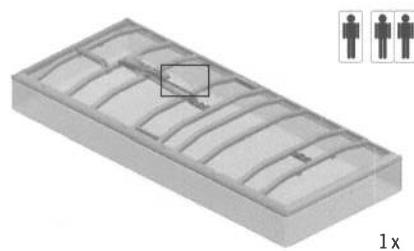

3138930 1x/2x






3137600 1x/2x




1027720 1x/2x




1x/2x






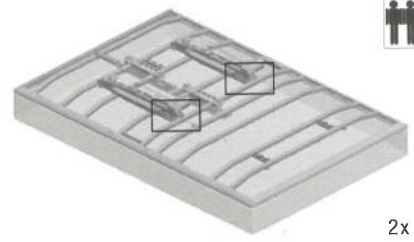

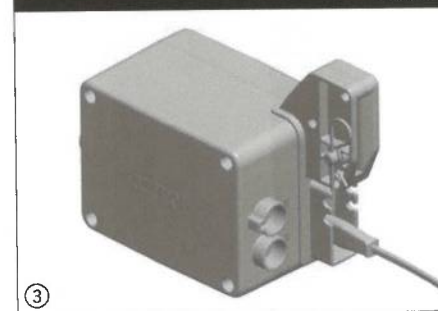


3138930

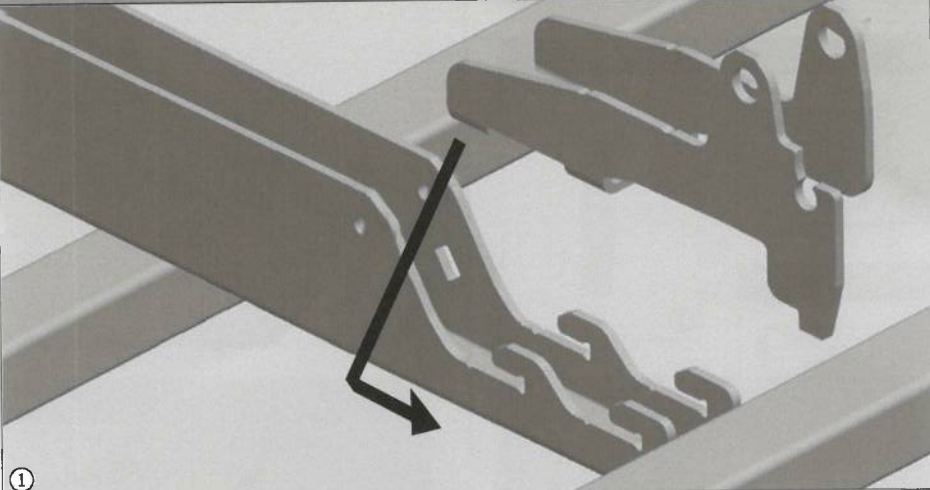


3137600 - 1027720

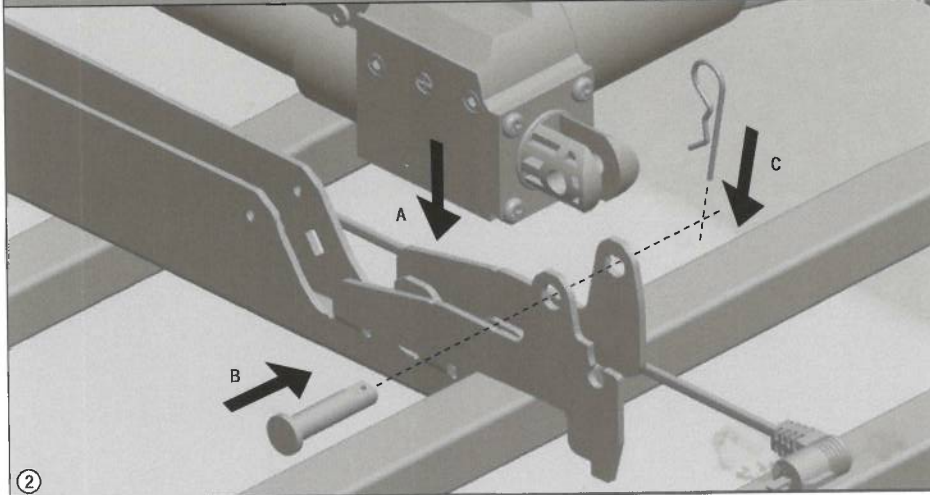

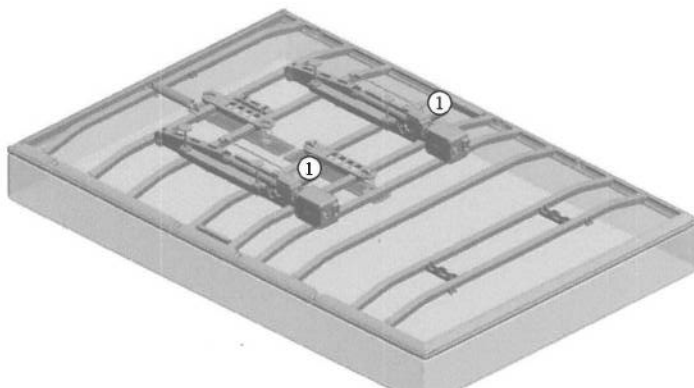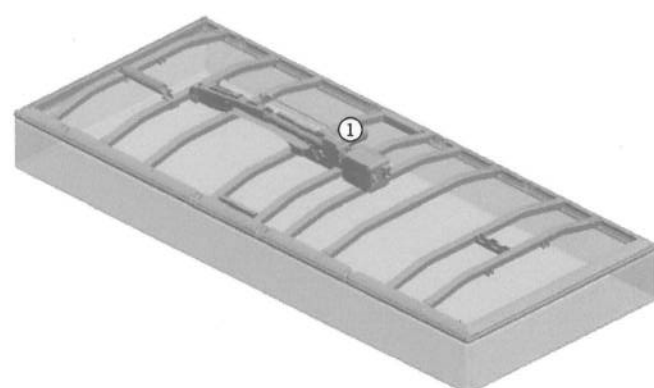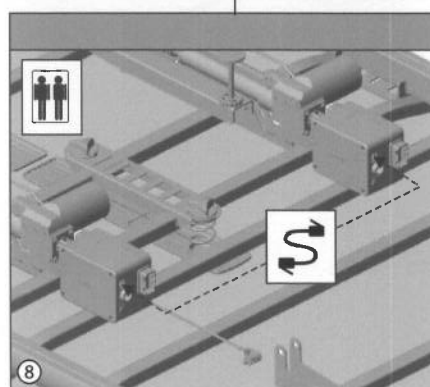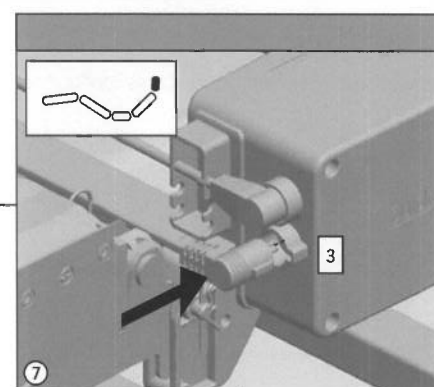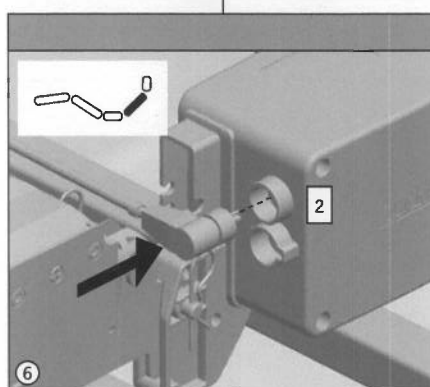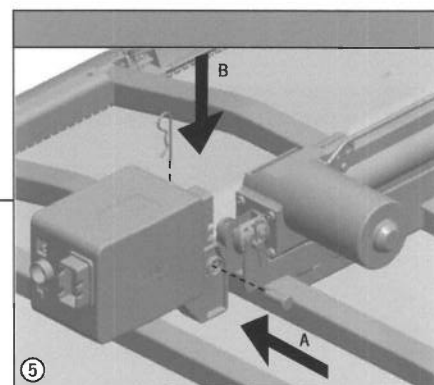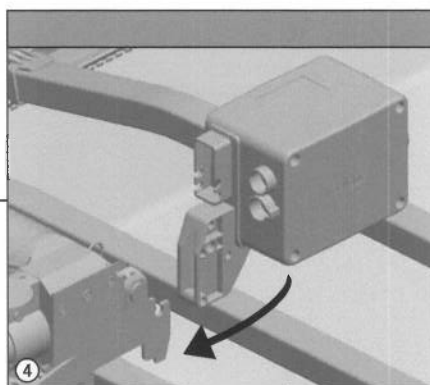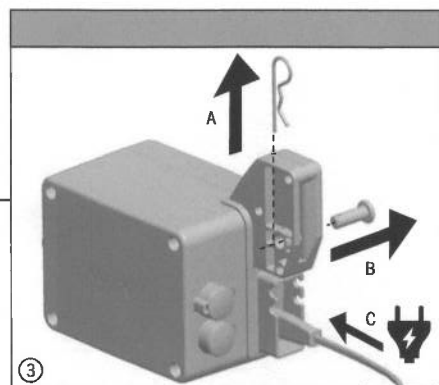

3138990 1x

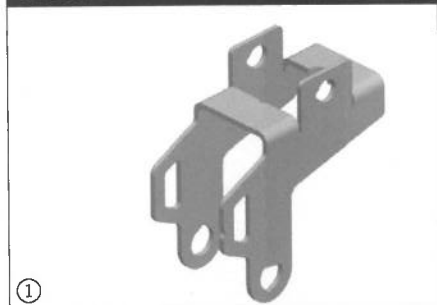




3137730 1x




3173900 2x




1027720 2x







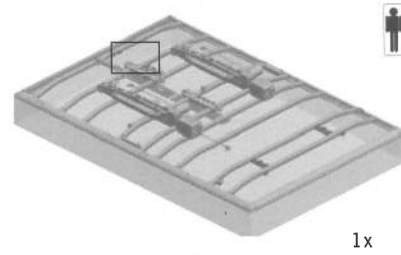
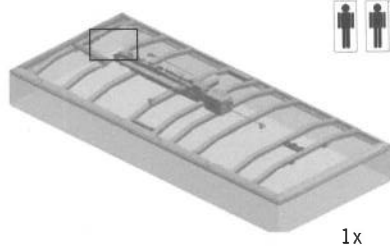



3137730 - 3138990 - 3173900

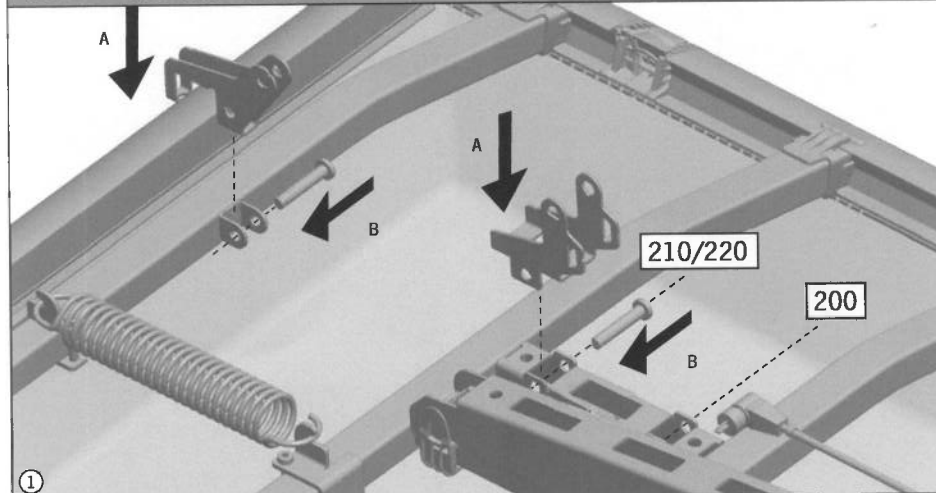

1027720

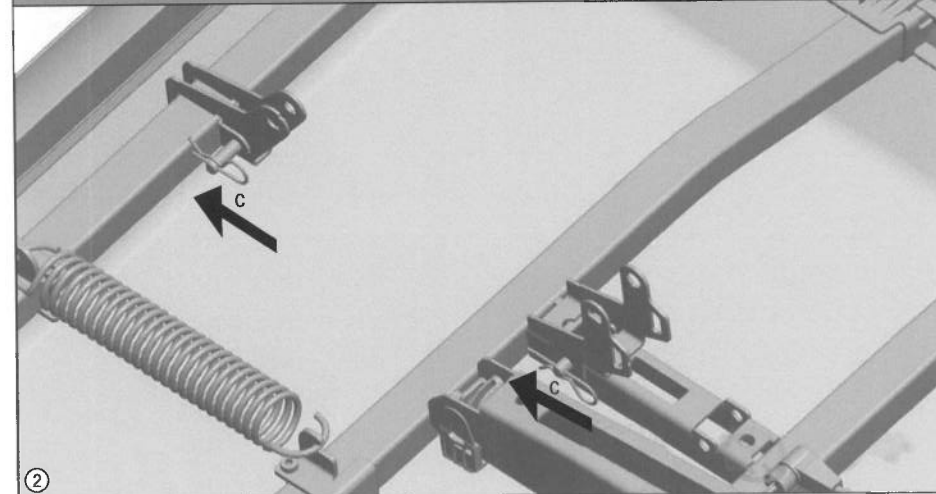

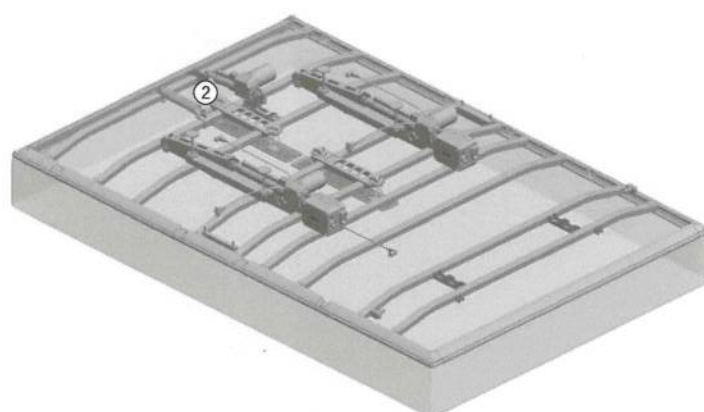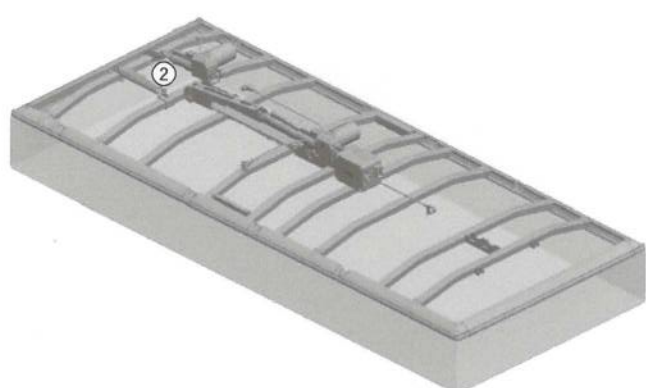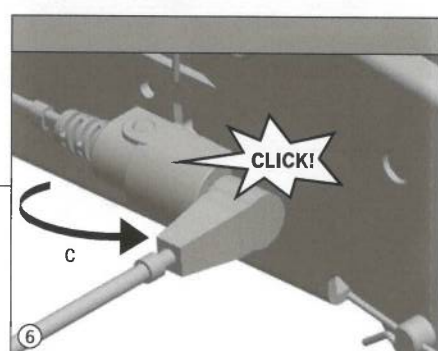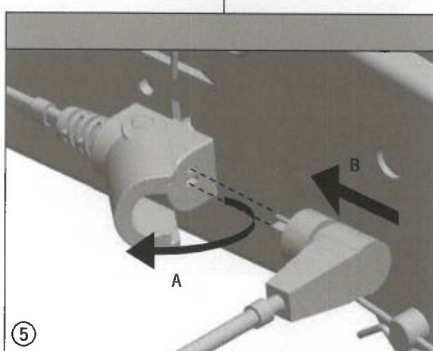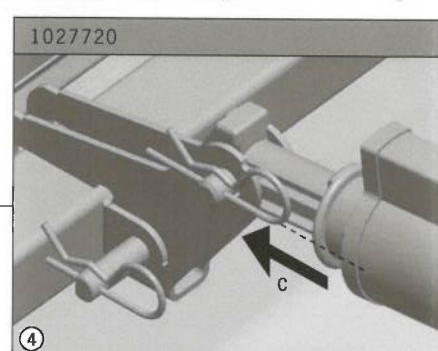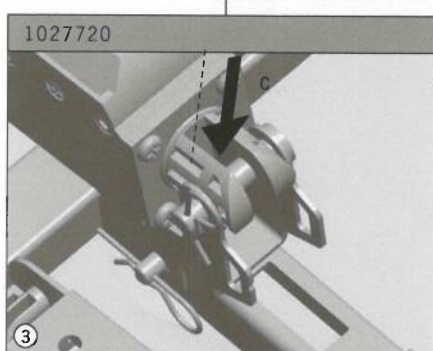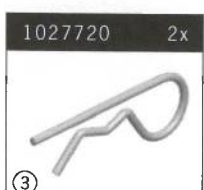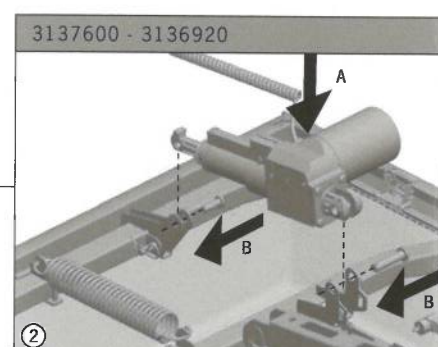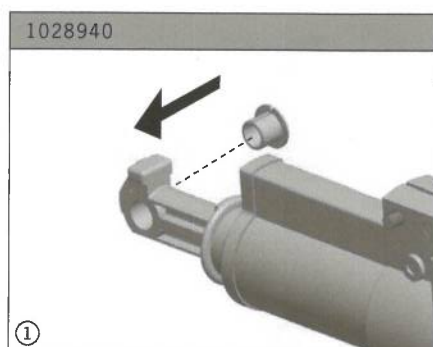

5329050

1x



①

5329060

1x




①

1028610


6x



②

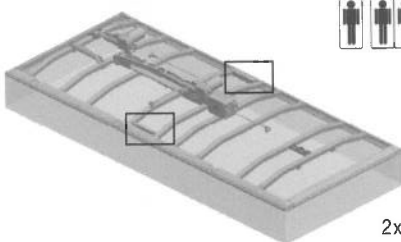


2x

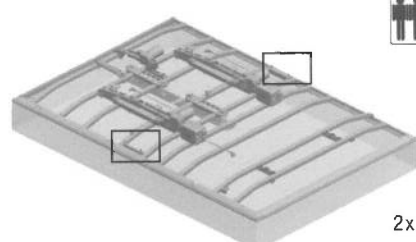


2x

5329050 - 5329060


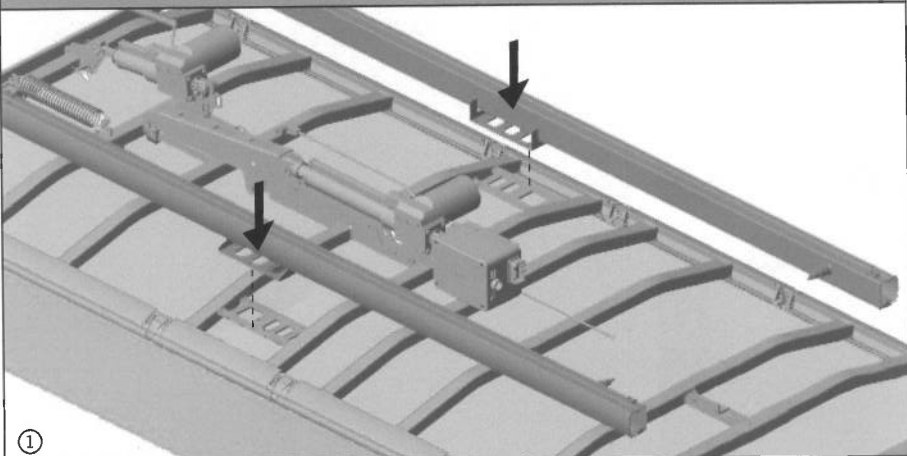





①

1028610




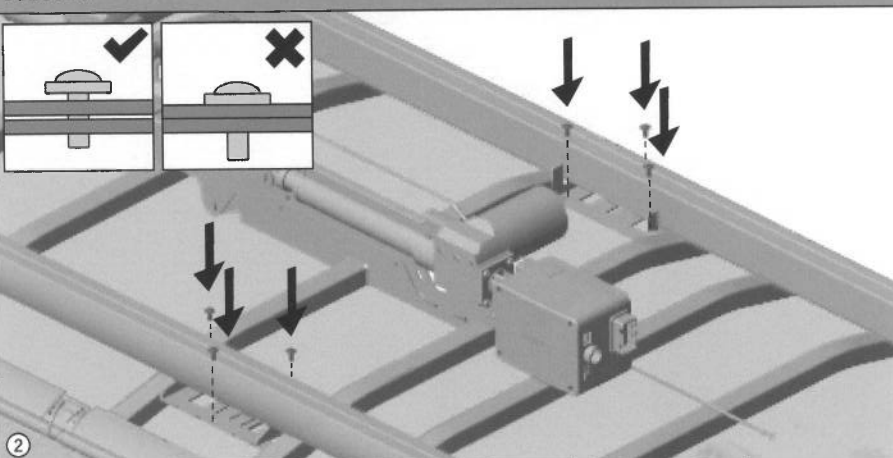









②

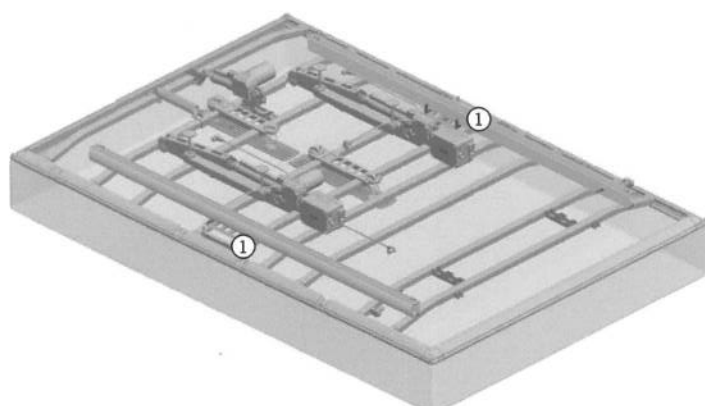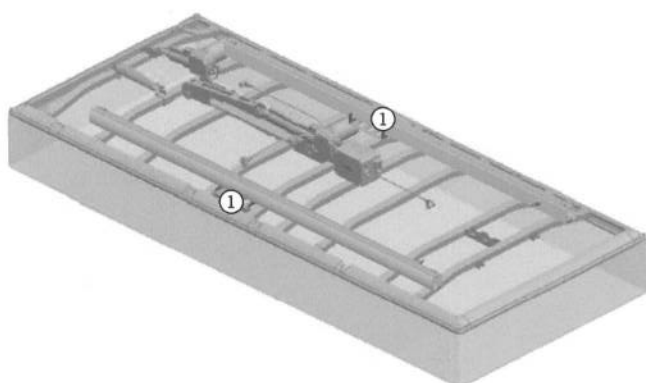


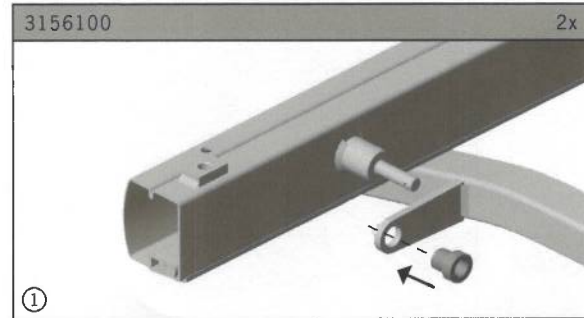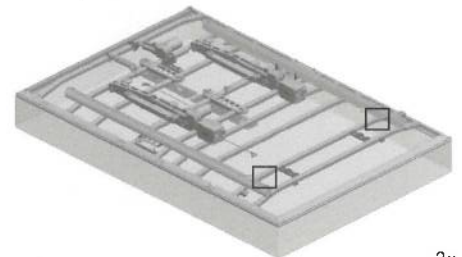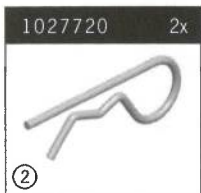


1020990 - 3173520 - 1027720

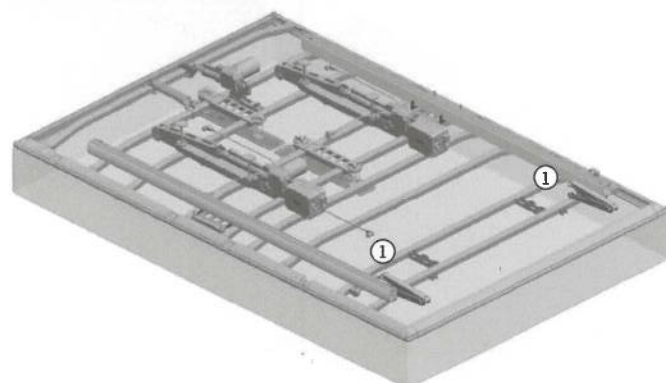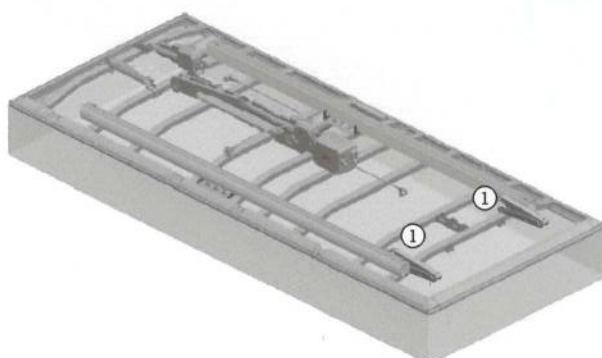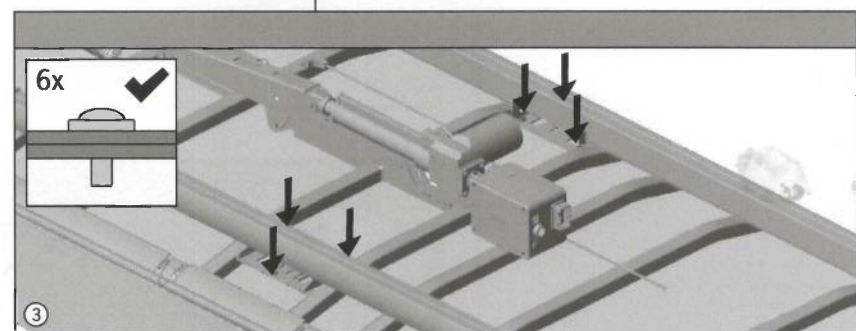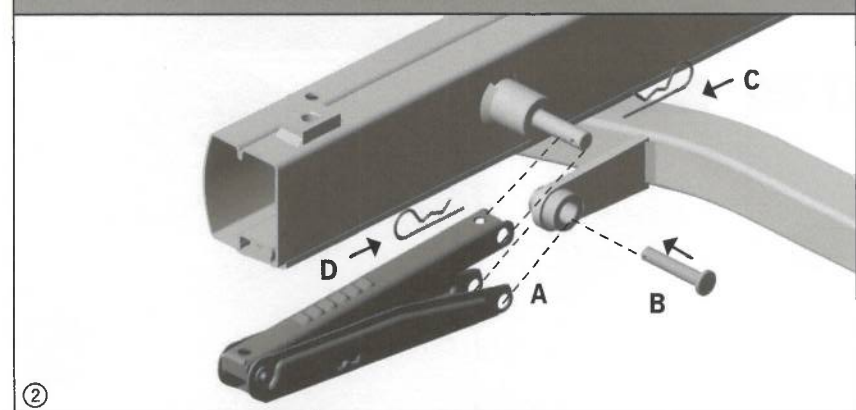

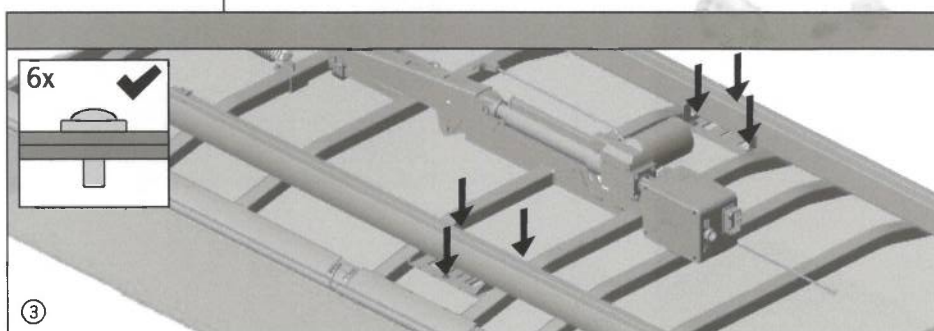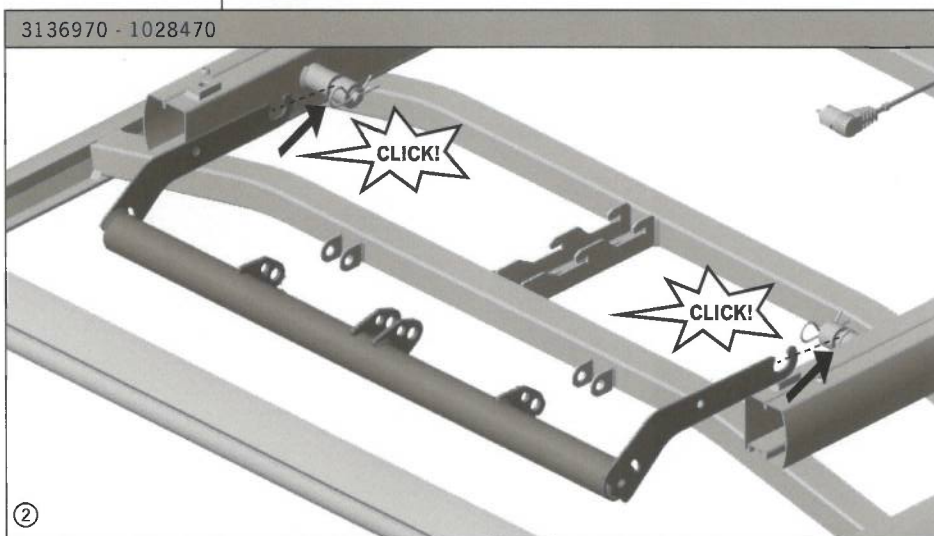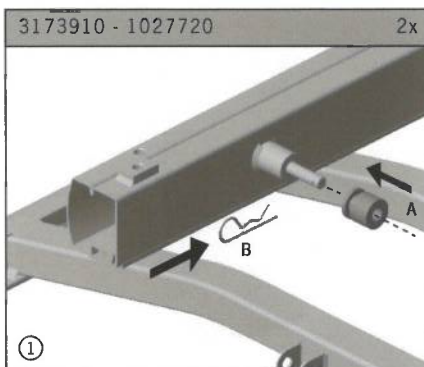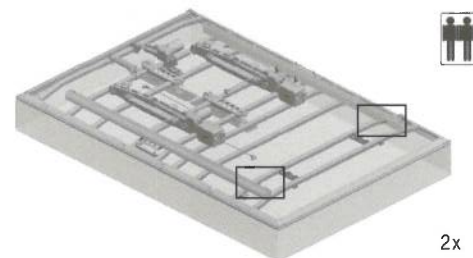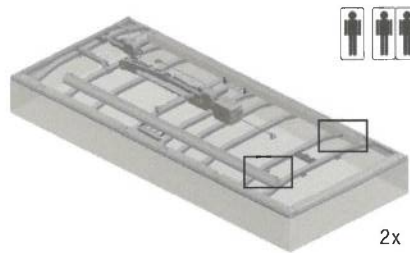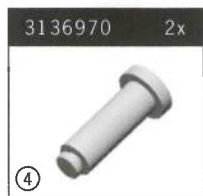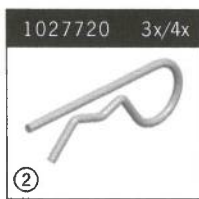

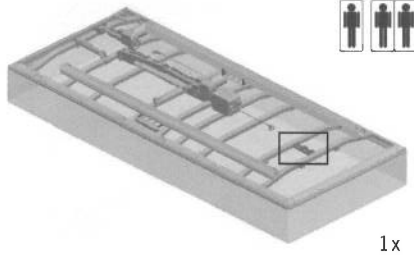

1x

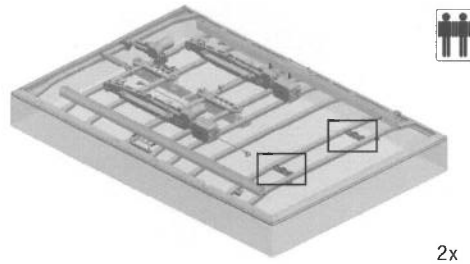

2x

